

koaty™

CW525

ELITE WIRELESS KEYBOARD & MOUSE COMBO



Dear Valued Customer,

We appreciate your trust in our products and sincerely thank you for selecting Koaty product. Your choice means a lot to us.

We're committed to providing you with a great experience. If you have any suggestions for improvement, or a new product idea please share them with us. Your feedback is invaluable.

Wishing you a fantastic experience with our product!

Best Regards,
Team Koaty





INSTRUCTION MANUAL

PLEASE READ ALL INSTRUCTIONS CAREFULLY
AND RETAIN FOR FUTURE USE

Package Contents

 
Wireless Keyboard
Wireless optical Mouse
User Manual
Nano Receiver (USB)
AA Battery & 2 X AAA Battery

Mouse Specifications

Mouse Buttons: 4 Keys
Interface Type: USB-A
2.4G Wireless
Effective distance: 6-8 meter
DPI: 800/1200/1600
Noiseless button & wheel
1 x AA Battery

Installation

1. Remove the back cover.
2. Remove the USB.
3. Insert it into the corresponding socket of your device.
4. Insert a AA battery into the mouse.
5. Close the lid and select ON.
6. The operating system will detect it immediately.

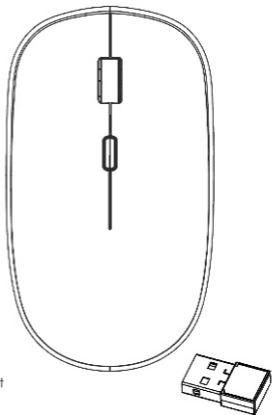



Keyboard Specifications

Working voltage : 2.2 - 3.2V

 
Working current : <6mA

Number of keys : 105 Keys


Battery : 2 x AAA

Product weight : 535 ± 53.5g

Keyboard dimension : 439.4 x 135.35 x 23.3 mm



Product Overview

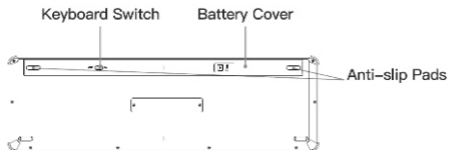 

Fn+ Esc Escape

Fn+ F1 Music player

Fn+ F2 Volume down

Fn+ F3 Volume up

Fn+ F4 Mute

Fn+ F5 Prev track

Fn+ F6 Next track

Fn+ F7 Play/Pause

Fn+ F8 Stop

Fn+ F9 Browser

 
 
 
Fn+ F10 Email

Fn+ F11 My computer

Fn+ F12 Favorites



Operation Methods

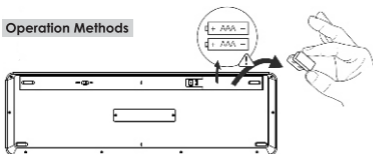

1. Remove the back covers from the keyboard, Insert 2*AAA Batteries into the Keyboard battery slot, and turn on the power switch.
2. Plug the receiver into the USB port of the computer, and the two devices will be connected to your computer automatically after several seconds.

Power Saving Mode

The keyboard & Mouse will go into sleeping mode automatically when not being used, Press any button of the keyboard to activate them.

Important Safeguards & Precautions

1. SAVE THESE INSTRUCTIONS - This sheet contains important safety and operating instruction.
2. Remove the batteries if the product is not going to be used for a long periods of time.
3. For indoor use only. Never expose to direct sunlight or wet weather conditions.
4. Do not use if the equipment is damage.
5. Do not disassemble the product. Disassembly may result in a risk of safety hazards.
6. Do not throw of shake the product.

SOLUTION TO PROBLEMS OF WAKING COMPUTER FROM SLEEP MODE BY KEYBOARD

Please verify that your device is allowed to wake the computer by following steps.

1. Open the keyboard control panel. A. In Windows Vista or Windows 7 and later versions, Click start, type keyboard in the Start search box, and then click keyboard or Microsoft keyboard in the program list. B. In Windows XP and earlier versions, click start, click Run, type control keyboard, and then click OK.
2. Click the hardware tab, and then click properties.
3. Click the change settings button (Not: This step requires (Administrator access)).
4. Click the power management tab, and then verify that the Allow this device to wake the computer is enable.
5. Click OK, and then click OK again.



Care and Maintenance:

Read the following recommendation before using the product. The product contains Class 1 LED. Operating temperature between 0° C and 40° C

Use Guidelines: Safe & Proper Use of Your Product

- Do not open or modify the product except for battery removal and replacement.
- Do not disassemble or attempt to service this product because there is a risk of radiation exposure, which could injure you.
- Do not direct the infrared/laser beam at anyone's eye or a reflective object.
- Do not immerse product in any liquid or expose to heat or moisture.
- If product is exposed to out-of-range temperature environments, power off the device until temperature has stabilized within the specified operating temperature range.
- This is not a Children's Product and is not designed or intended primarily for use by children under 10 years old. Supervise all children using this product
- This product is safe under normal and reasonably foreseeable operating conditions. If the product is operating improperly, contact Koaty support.
- Batteries, electronic and electrical equipment should not be disposed of with household waste. Wherever possible, they should be segregated and brought to an appropriate collection point to enable recycling and avoid potential impacts on the environment and human health.

Koaty Limited Hardware warranty -

- Koaty warrants that its hardware product shall be free from defects in materials and workmanship for the length of time identified on your product package beginning from the date of original retail purchase.
- Product must be returned to Koaty for any service or repair.
- Any changes or modifications to the product that are not expressly approved by Koaty may void the user's authority to operate the equipment and your warranty.
- Koaty's entire liability and your exclusive remedy for any breach of warranty shall be, at Koaty' option, to repair or replace a functional equivalent of the product.
- Koaty's Limited Warranty covers only those defects that arise as a result of normal use of the product and does not cover any other defects, issues, or problems, including those that arise as a result of

1. Improper maintenance, unauthorized modification or service, loss or damage in transit, or malicious code not introduced by Koaty.
2. Software, media, parts, or supplies not provided or supported by Koaty, including interoperability or compatibility problems;
3. Operation outside the product specifications;
4. Accident, misuse, liquid spills, abuse, contamination or other causes that are not defects in materials or workmanship.



- As with all batteries, the maximum capacity of any battery included in the Koaty Hardware Product will decrease with time or use and battery life cycle will vary depending on product model, configuration, loaded applications, features, use, wireless functionality, and power management settings. Accordingly, a decrease in maximum battery capacity or battery life cycle is not a defect in materials or workmanship, and this Limited Warranty does not cover changes in battery capacity or battery life cycle.
- Koaty has no obligation to replace or refund and cannot repair until you return the defective product to Zora Technologies.
- Koaty Hardware Products presented for repair may be replaced by refurbished Hardware Products of the same type rather than being repaired; refurbished parts may be used to repair Hardware Products; and replaced or repaired Hardware Products will be functionally equivalent in performance and reliability to original products that have been discontinued.

WARNING

- **WARNING!** Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions issued by your local authority.
- **WARNING!** To reduce the risk of fire or burns, do not disassemble, crush, or puncture; do not short external contacts; do not dispose of in fire or water.
- **WARNING!** Keep the battery away from children.

Troubleshooting :

- Wireless technology works up to a 30-foot transmission distance but signal may be shortened due to obstructions or when battery is low.
- If connection is lost: turn mouse off, remove the battery, and unplug the USB dongle. Wait a few seconds, then insert battery back into mouse, turn mouse back on, and plug dongle back in. This should reset the connection.
- If above connection reset doesn't work, remove the battery, wait a few seconds, then Plug in the receiver first, press and hold middle click and right click for three seconds. Turn on power switch and continue holding the middle click + right click till the LED stabilises. This resets the connection between the receiver and mouse.

If the keyboard doesn't work properly, please try the following.

1. Take out the receiver from the computer.
2. Plug the receiver back into your computer's USB port.
3. Press "Esc" and "K" keys at the same time and hold for few seconds.
4. The keyboard will be reconnected to the receiver.

Koaty is a Zora Technologies Trademark.

All other Third party logos are registered trademarks of their respective owners.

